

# AXT (Accessories\_Deluxe Type)


## User Installation Guide




고객센터 / Global Service Center

- TEL +82-080-230-7778
- E-mail service@hd.com


### / 01. Overall Dimensions (AXT HGD63)

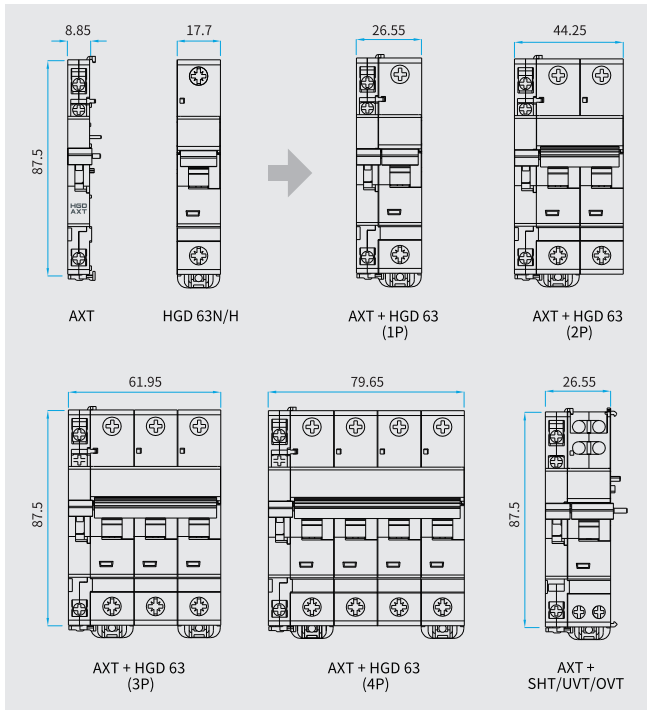


### / 02. Overall Dimensions (AXT HGD125, HRC)

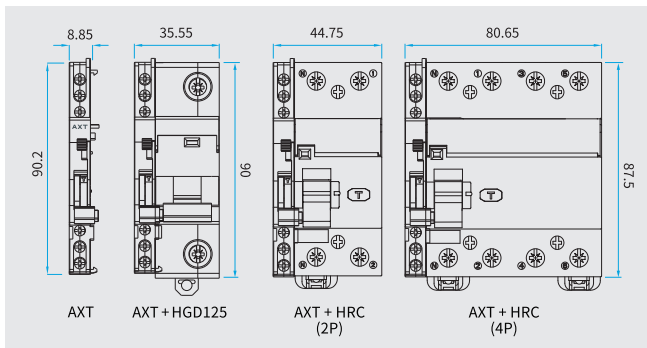


### / 03. AXT HGD 63

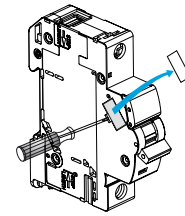


- 1 Remove the window sticker of the protection device with screw driver or a suitable tool.

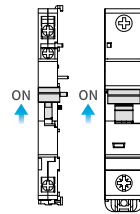


- 2 Make sure the knob is in ON Position. Caution-Don't mount in OFF position.

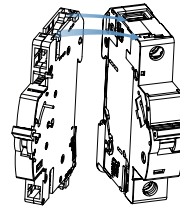

- 3 Adjust the U-shaped locks present at the upper end of the AXT in such a way that they get fitted into the slots present in the protection device.

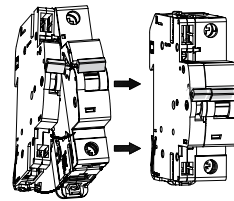


- 4 Rotate the AXT so as to bring it nearer to the protection device for final locking, during this snap lock shall remain pressed until the U-Lock of the snap lock gets fitted into the slot provided in the protection.

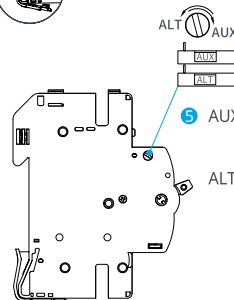


- 5 AUX-Type : The AXT contacts will signal whether the breaker is in the ON or OFF position.

ALT-Type : The ALT-Type includes a set of contacts that will only signal when the breaker has tripped due to any fault. Typically, the contacts would be connected to an alarm to signal the operator that an overload/short circuit has occurred.

### / 04. AXT HGD125, HRC

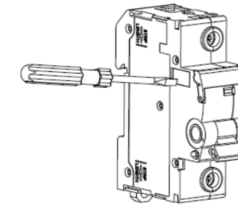


- 1 Remove the window sticker of the protection device with screw driver or a suitable tool.

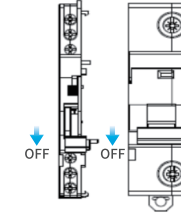

- 2 Make sure the knob is in OFF Position. Caution-Don't mount in ON position.




- 3 Adjust the U-shaped locks present at the upper end of the AXT in such a way that they get fitted into the slots present in the protection device.

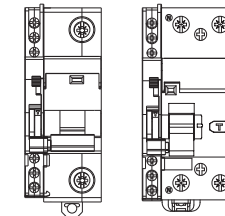

- 4 Rotate the AXT so as to bring it nearer to the protection device for locking, Adjust the locks present at the upper end of AXT in such a way that they get fitted in slots present in protection device.

AXT+HGD 125

AXT + HRC

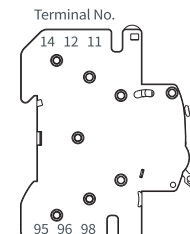

- 5 AUX-Type  
· ON : 11 - 12  
· OFF : 11-14

- ALT-Type  
· ON/OFF : 95 - 96  
· TRIP : 95 - 98

/ 03. OVT/UVT/SHT HGD63

/ 04. Accessories Mounting

# OVT/UVT/SHT (Accessories\_Deluxe Type)


## User Installation Guide





고객센터 / Global Service Center

- TEL +82-080-230-7778
- E-mail service@hd.com


/ 01. Overall Dimensions (OVT/UVT/SHT)

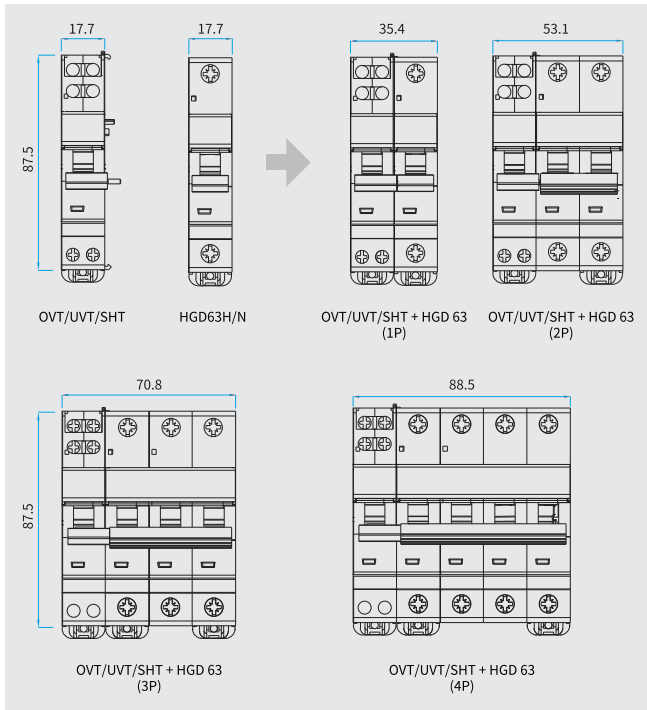


/ 02. Product Range

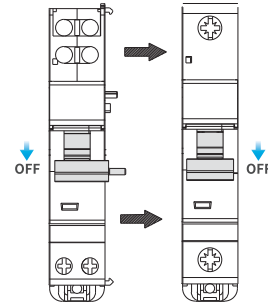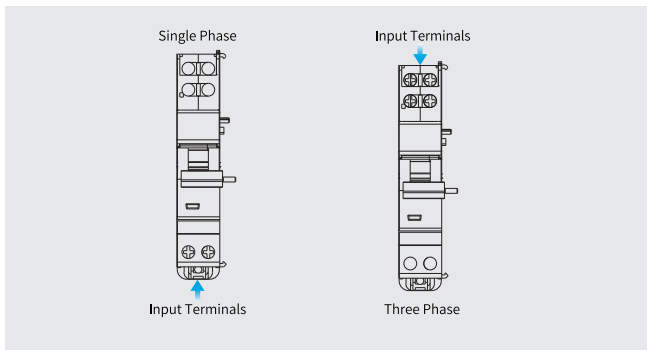



1 Make sure that both the knob of OVT/SHT/UVT and MCB are in OFF position.

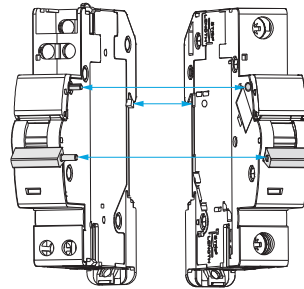

2 Mount the OVT/UVT/ SHT on the breaker (HGD 63) in such a way that they get fitted into each slot as provided.

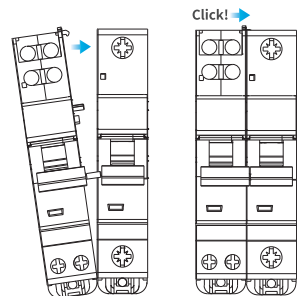

3 Mount the bottom lock first than click fit the upper lock with breaker as shown below.

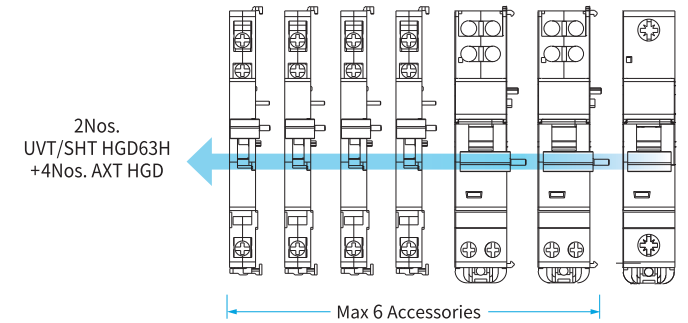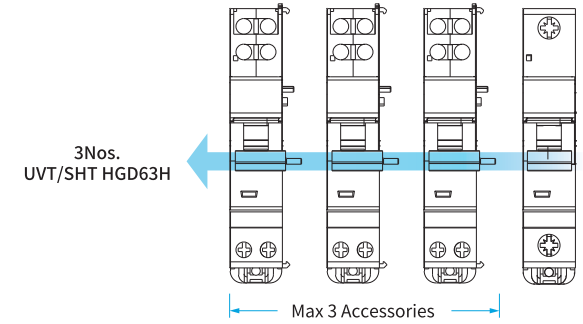

**경고 / WARNING**

- 제품과 동봉된 사용설명서를 참고하시기 바랍니다
- 안전한 작업 환경에서, 충분한 교육을 받은 허가된 전문 작업자에 의해 제품을 설치 및 조작하여 주시기 바랍니다.
- 임의적인 분해, 수리, 개조를 하지 마시고 제품에 이상이 발생하면 고객센터로 문의 바랍니다.
- Please check the user manual enclosed with the device.
- Any installation and operation shall be performed by the authorized personnel who have sufficient expertise for electrical work and safety regulation.
- Impermissible disassembly, repair and modification to the device can lead to malfunction. If required, please contact the service center.